


Differential line driver connection sheet

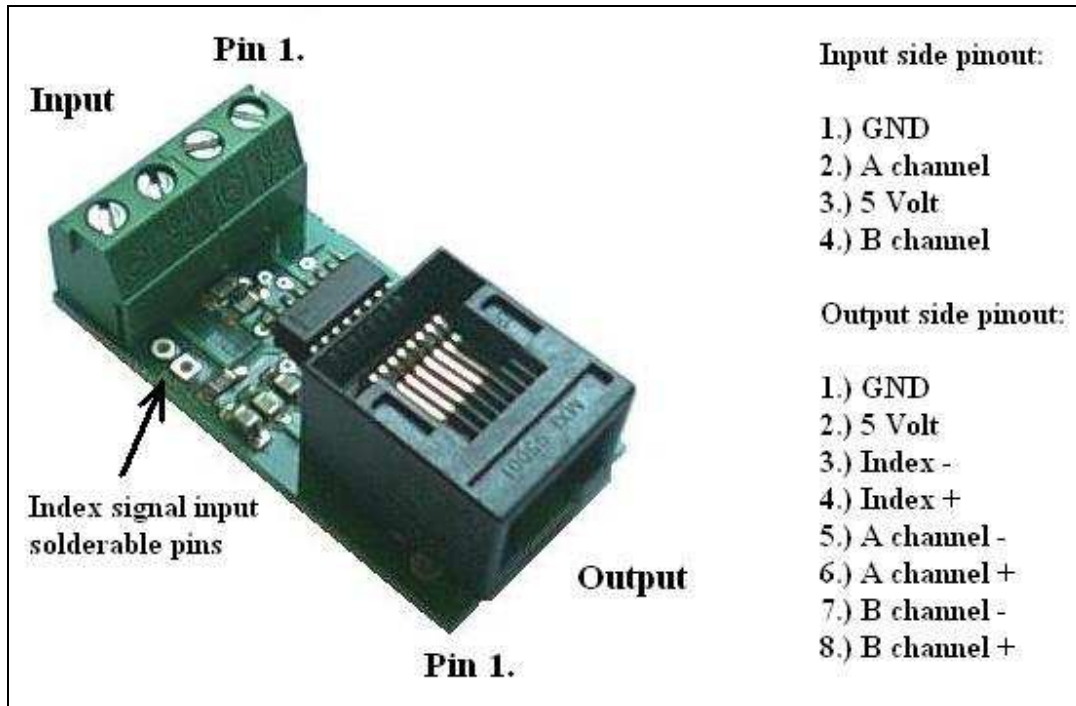

The differential line driver can be used to convert single ended to differential signals. Our servo drives accept only differential encoder inputs, therefore single ended encoder signals must be converted to differential before connecting them to our servo drives.

The Index pin is not used by our drives, but to use this device with 3rd party drives we left the index signal input on the header solderable pins.

For more information visit:

<http://www.cncdrive.com>
e-mail: info@cncdrive



Please consider the environment before printing this document.